




RANGE OF WASHBASIN UNITS

■ Our expertise p.4

■ Technical specifications p.10

■ Our projects p.20

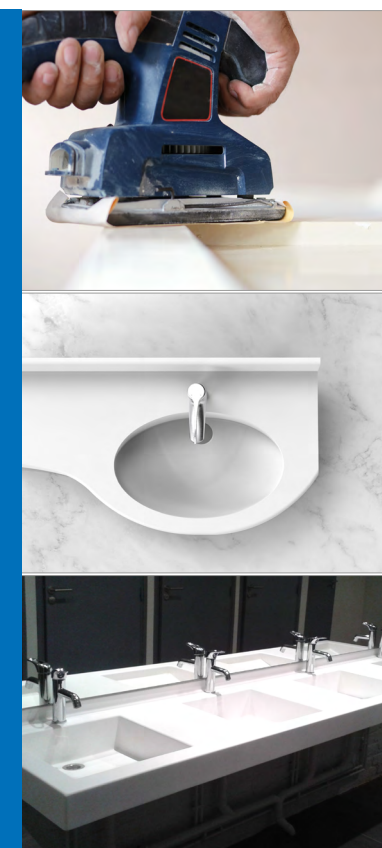



**OUR
EXPERTISE**

EXPERTISE MADE IN FRANCE

Since 1998, the French company Résinor has been designing, manufacturing and distributing fittings for healthcare facilities (hospitals, clinics, maternity wards) and early years professionals.

We design washbasin units to meet your specific layout requirements and to order.

Discover our range, which offers a wide variety of options: countertop height, basin, fixings and units.

All our products are manufactured in France using French and European components, in accordance with European regulations.



All our products meet sustainability criteria (low VOC content, recycling, etc.).



LET'S WORK TOGETHER ON YOUR PROJECT

1 NEEDS ANALYSIS
Upon receipt of your enquiry, our sales representatives analyse the layout of the premises, the functions of each product and the specific use to which it will be put. Working in partnership with the architects and project owners, they finalise the specifications.



2 DESIGN OF A UNIQUE, TAILOR-MADE PROJECT
Our design office will draw up a comprehensive project for you, complete with technical and financial documentation. This bespoke design ensures an optimal, ergonomic and functional layout that meets the needs, standards and requirements of both staff and patients.



3 MANUFACTURING
The 'resin' workshop has been designed for the manufacture of large components by spraying acrylic resin onto a rigid, glass-fibre-reinforced core. A joinery workshop equipped with CNC machines produces the moulds required for the resin components, as well as the wall and floor units, to create a cohesive and well-fitted ensemble.



4 INSTALLATION
Our experienced fitters then install the system in full compliance with regulations and in line with hospital practices. Our team of fitters is flexible and responsive. Their carpentry skills are complemented by a sound grounding in the fundamentals of plumbing.

* Subject to our General Terms and Conditions of Sale and Use.
** For DELABIE taps and fittings.

RÉSINOR RESIN *

For washbasin units, we use synthetic resins that enable us to produce one-piece, self-supporting treatment units with no joints or adhesives, which offer unrivalled hygiene standards:

- resistance to physical and chemical damage,
- permanently non-porous, and therefore perfectly hygienic,
- easy to clean and maintain.

Résinor products are formulated using unsaturated resins, pigments and additives, and reinforced with glass fibres.

Our resin formulation consists of one-third aluminium trihydrate, a special sanitary-grade ISO NPG gel coat, mixed with an unsaturated polyester resin in solution. Flat surfaces are reinforced with polyurethane foam.





TECHNICAL SPECIFICATIONS

PREREQUISITES	P. 12
TANKS	P. 13
CUSTOMISATION OF BANNERS	P. 14
BINDINGS	P. 16
TAPS AND FITTINGS	P. 18
CUSTOMISATION	P. 19

PREREQUISITES

All our vanity units are designed entirely to measure, tailored to your requirements and technical constraints.

Evacuations

There are two types of drainage systems, which should be chosen according to your needs.

The gridded drain

It is most commonly used for the basins in our washbasin units.



Overflow on request

This device allows water to drain away automatically, thereby preventing any overflow.



The finishes

It is important to know the position of the vanity unit in the room where it is to be installed in order to determine the finishes: against a wall, on the right, on the left, etc.

The splashback must be positioned against a wall, except in the case of a smooth, double-sided splashback, which in this case may be positioned on one side.

The fascia is fitted where there is no wall.



The PMR standard

All the fittings offered by Résinor comply with the PMR (People with Reduced Mobility) standard. The PMR standard is a legal requirement designed to ensure that anyone with a disability can move around easily and use appropriate facilities.


Our products are specially adapted to meet these technical requirements and guarantee perfect ergonomics.

CHOOSING YOUR TANK


Choose a tank to suit your needs

Our tanks are moulded in a single piece, with no joints or adhesives. Depending on your requirements, choose from our range of tank models and sizes: round, rectangular, oval, varying in width, or varying in depth*. It is possible to arrange several tanks on the same level.


Rectangular tanks

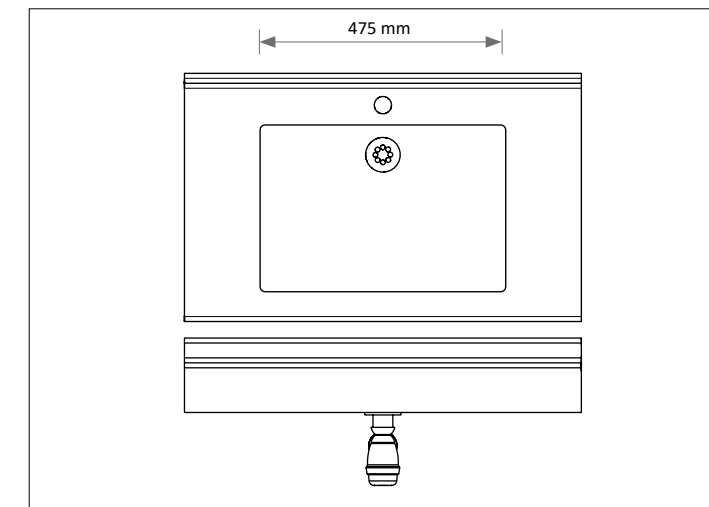

Round tanks

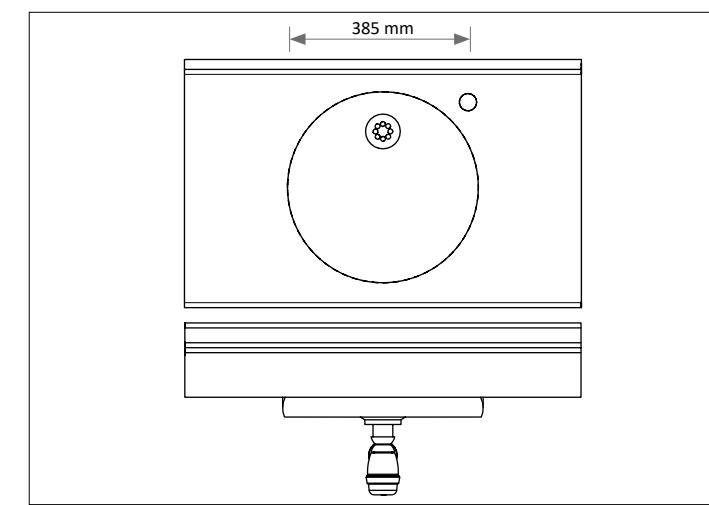

Oval tanks

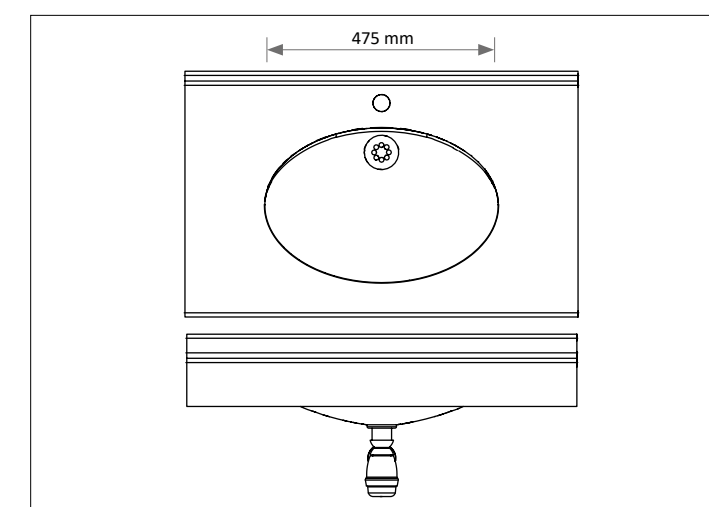


* The dimensions of the tanks are provided for guidance only; for further information on the feasibility of your project, please contact our sales team.

BANNER CUSTOMISATION

Depending on your requirements, you can choose from a range of configurations. The fascia can be customised to suit the layout of the premises, accessibility requirements, aesthetic considerations, etc.



Examples of configurations

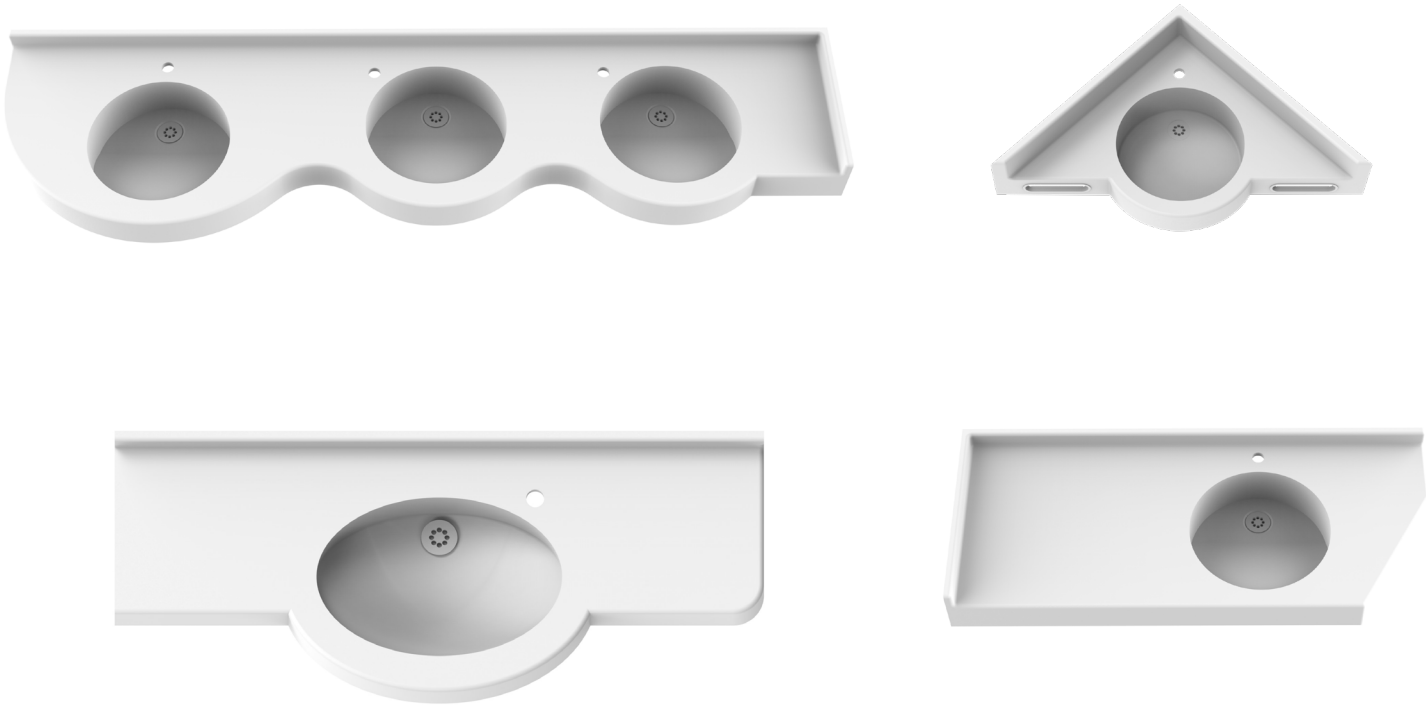

Option

Towel rack




Option to fit a towel rail insert* made from white PVC.

*For flat surfaces only
** Available in several sizes

CHOOSING YOUR BINDINGS

Depending on your requirements, you can choose from several types of mounting options: angle bracket, bracket or cabinet.

Fixations

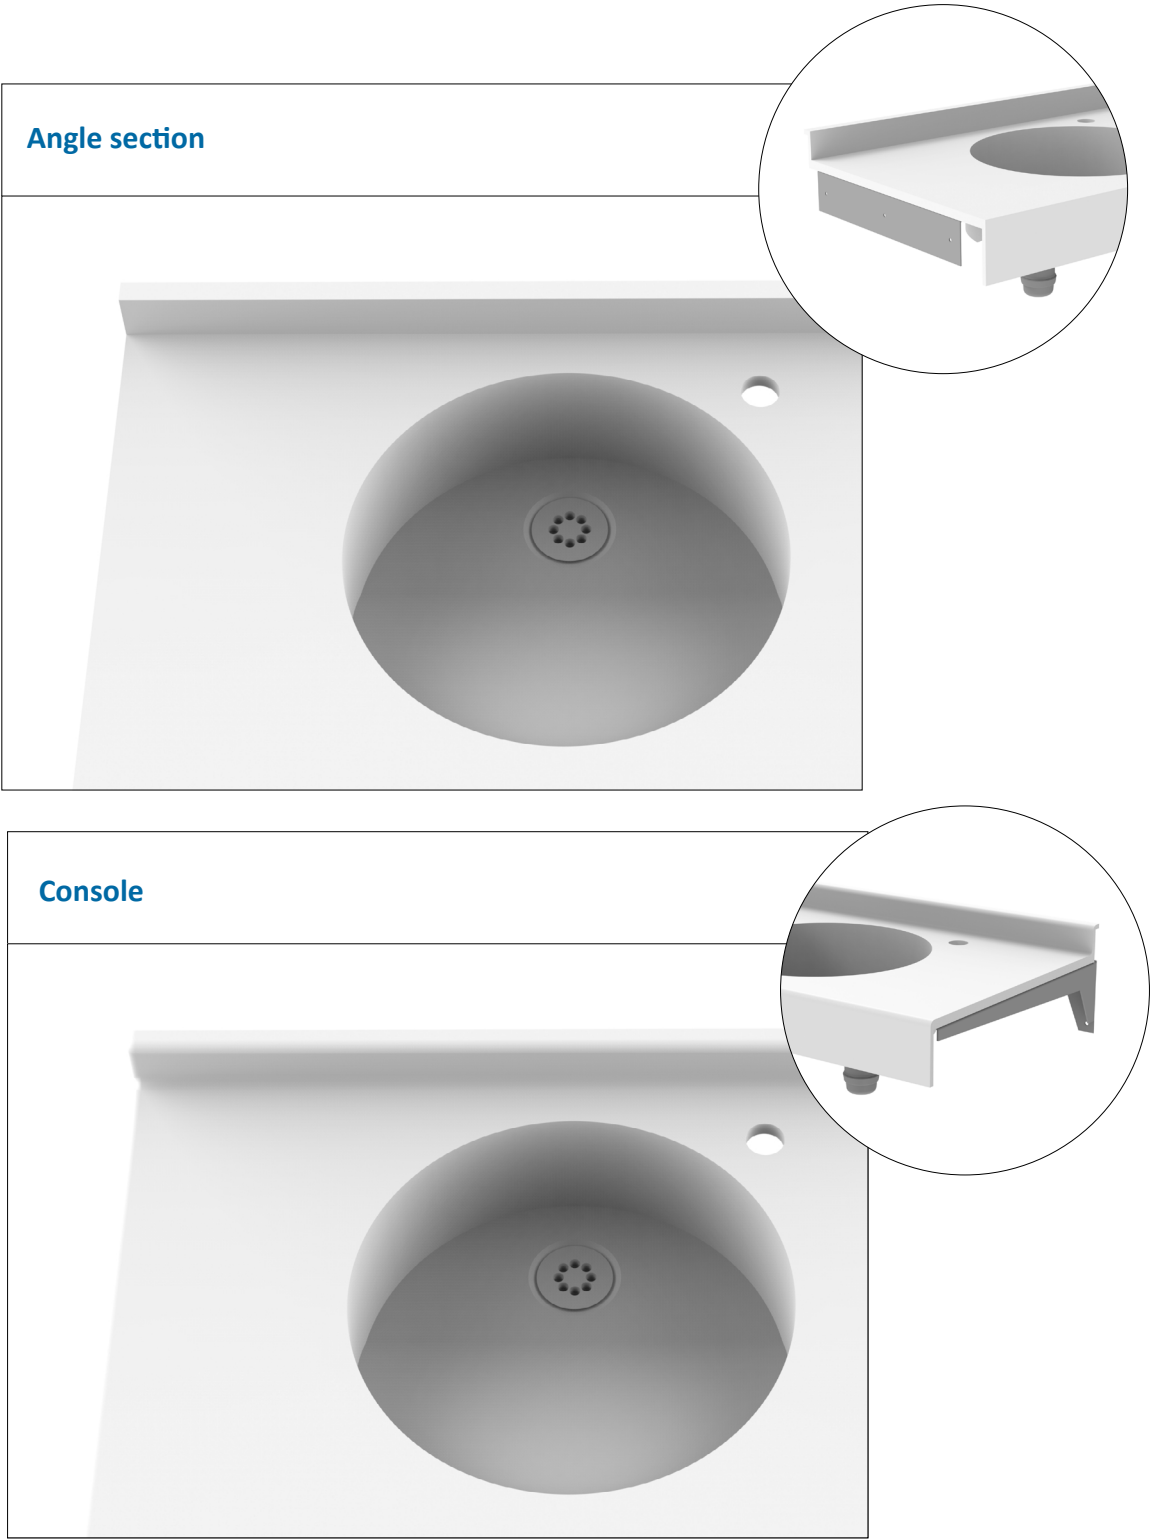

PVC material

We are able to supply furniture made from expanded PVC panels, suitable for installation in damp areas such as open-plan bathrooms, swimming pools, etc.
The fronts are available in laminate finishes from our range.

Rigid and expanded PVC sheets

- Compact, smooth, rigid surface
- Good thermal and acoustic insulation
- Good flexural strength
- Good resistance to moisture
- Flame-retardant
- Lightweight
- Easy to print on
- Thermoformable, machinable, bondable



CHOOSING YOUR TAPS AND FITTINGS

For a washbasin, choose the tap that suits you

Ref. 742510 - TEMPOSOF MIX 2 self-closing washbasin mixer tap



Soft-start
Delay ~7 seconds.
Flow rate preset to 3 l/min at 3 bar, adjustable from 1.4 to 6 l/min.
Tamper-proof anti-limescale jet breaker.
F3/8" PEX hoses with filters and non-return valves.
Side-mounted temperature control with standard lever and adjustable temperature stop.
H.85 L.100

Ref. 2521L – Mechanical washbasin mixer tap



Single-hole mechanical mixer tap fitted with a BIOSAFE hygienic outlet.
Standard Ø 40 ceramic cartridge with pre-set maximum temperature limit.
Flow rate limited to 5 l/min at 3 bar.
Hygiene L.150 lever control.
F3/8" PEX hoses.
H.185 L.135

Ref. 440000 - TEMPOMATIC 4 automatic washbasin tap



230/6 V mains power supply via a flush-mounted unit.
Anti-stagnation solenoid valve and electronic module integrated into the tap body.
Flow rate preset to 3 l/min at 3 bar, adjustable from 1.4 to 6 l/min.
Anti-limescale aerator.
Periodic flushing (~60 seconds every 24 hours after last use). Active infrared presence detector, optimised at the spout tip.

Chrome-plated metal body.
Cover secured by 2 concealed screws.
F3/8" PEX hose with shut-off valve and filter.
Mounting reinforced by two stainless steel rods.
Anti-blockage safety feature.
H.75 L.110




CUSTOMISE YOUR EQUIPMENT

Style, colour, personalise your furniture to make it unique

RESINS



WHITE RAL 9010

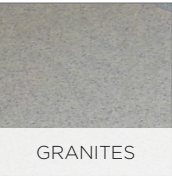

GRANITES

- RAL colour chart available on request
- GRANITES colour chart available on request

FURNITURE FRONTS

Classic range*

Wood finishes



WHITE MAPLE E009



GIVERNY OAK C127




BERGEN BEECH H028



MEYMAC OAK D018




WASHED OAK C103

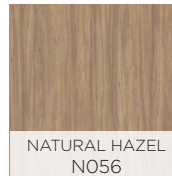

NATURAL HAZEL N056



WENGE OAK C047

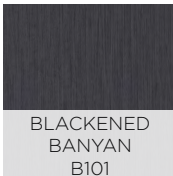

BLACKENED BANYAN B101

Plain colours



MIMOSA M103



SAMBA YELLOW J024



FLORIDA F001



CAPUCINE C062



CHERRY RED R036



VELVET ROSE R060



PLUM P112



OSLO BLUE B048




BALTIC BLUE B124



GREEN OF GREY V106



GREEN APPLE P092

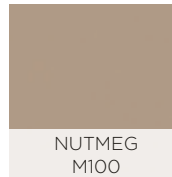

NUTMEG M100



PEARL GREY G003




STORM GREY G059

* Other ranges available on request.



OUR PROJECTS



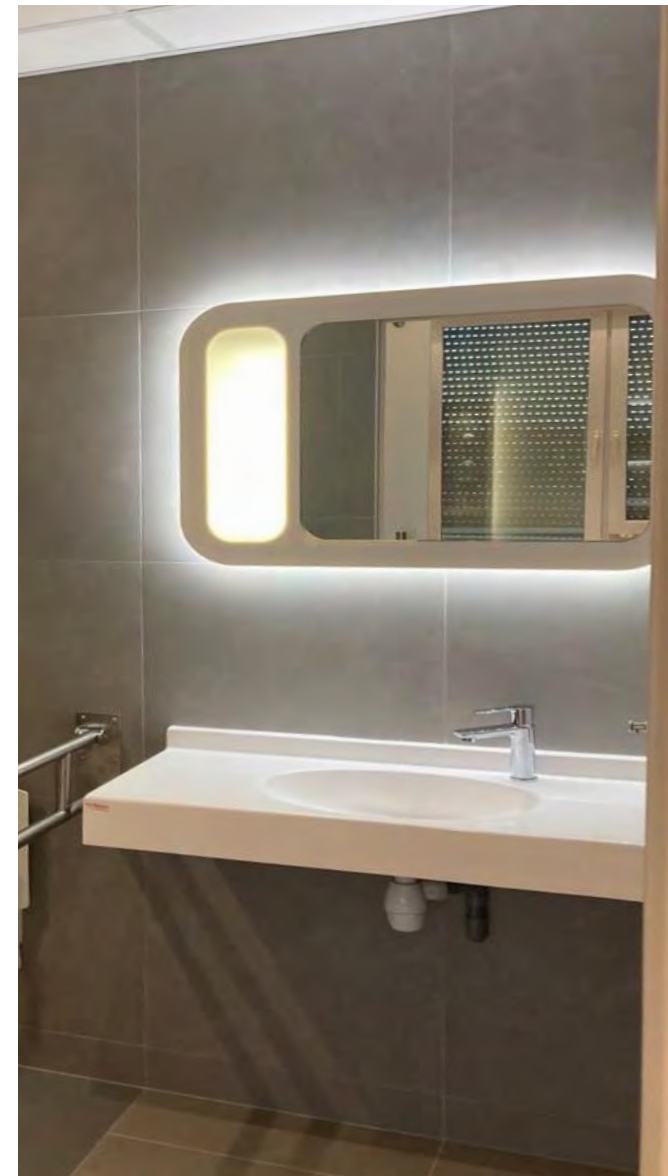





Parc EURASANTÉ - 310, rue Jules Vallès
59120 Loos - France
Tel +33 (0) 328 160 480 / Fax +33 (0) 328 160 489

Mail : contact@biolume.com
www.biolume.com

 [biolume](#)

 [biolumeresinor59fr](#)